AKAI

X4 IV

MODEL

SERVICE MANUAL

M-11D

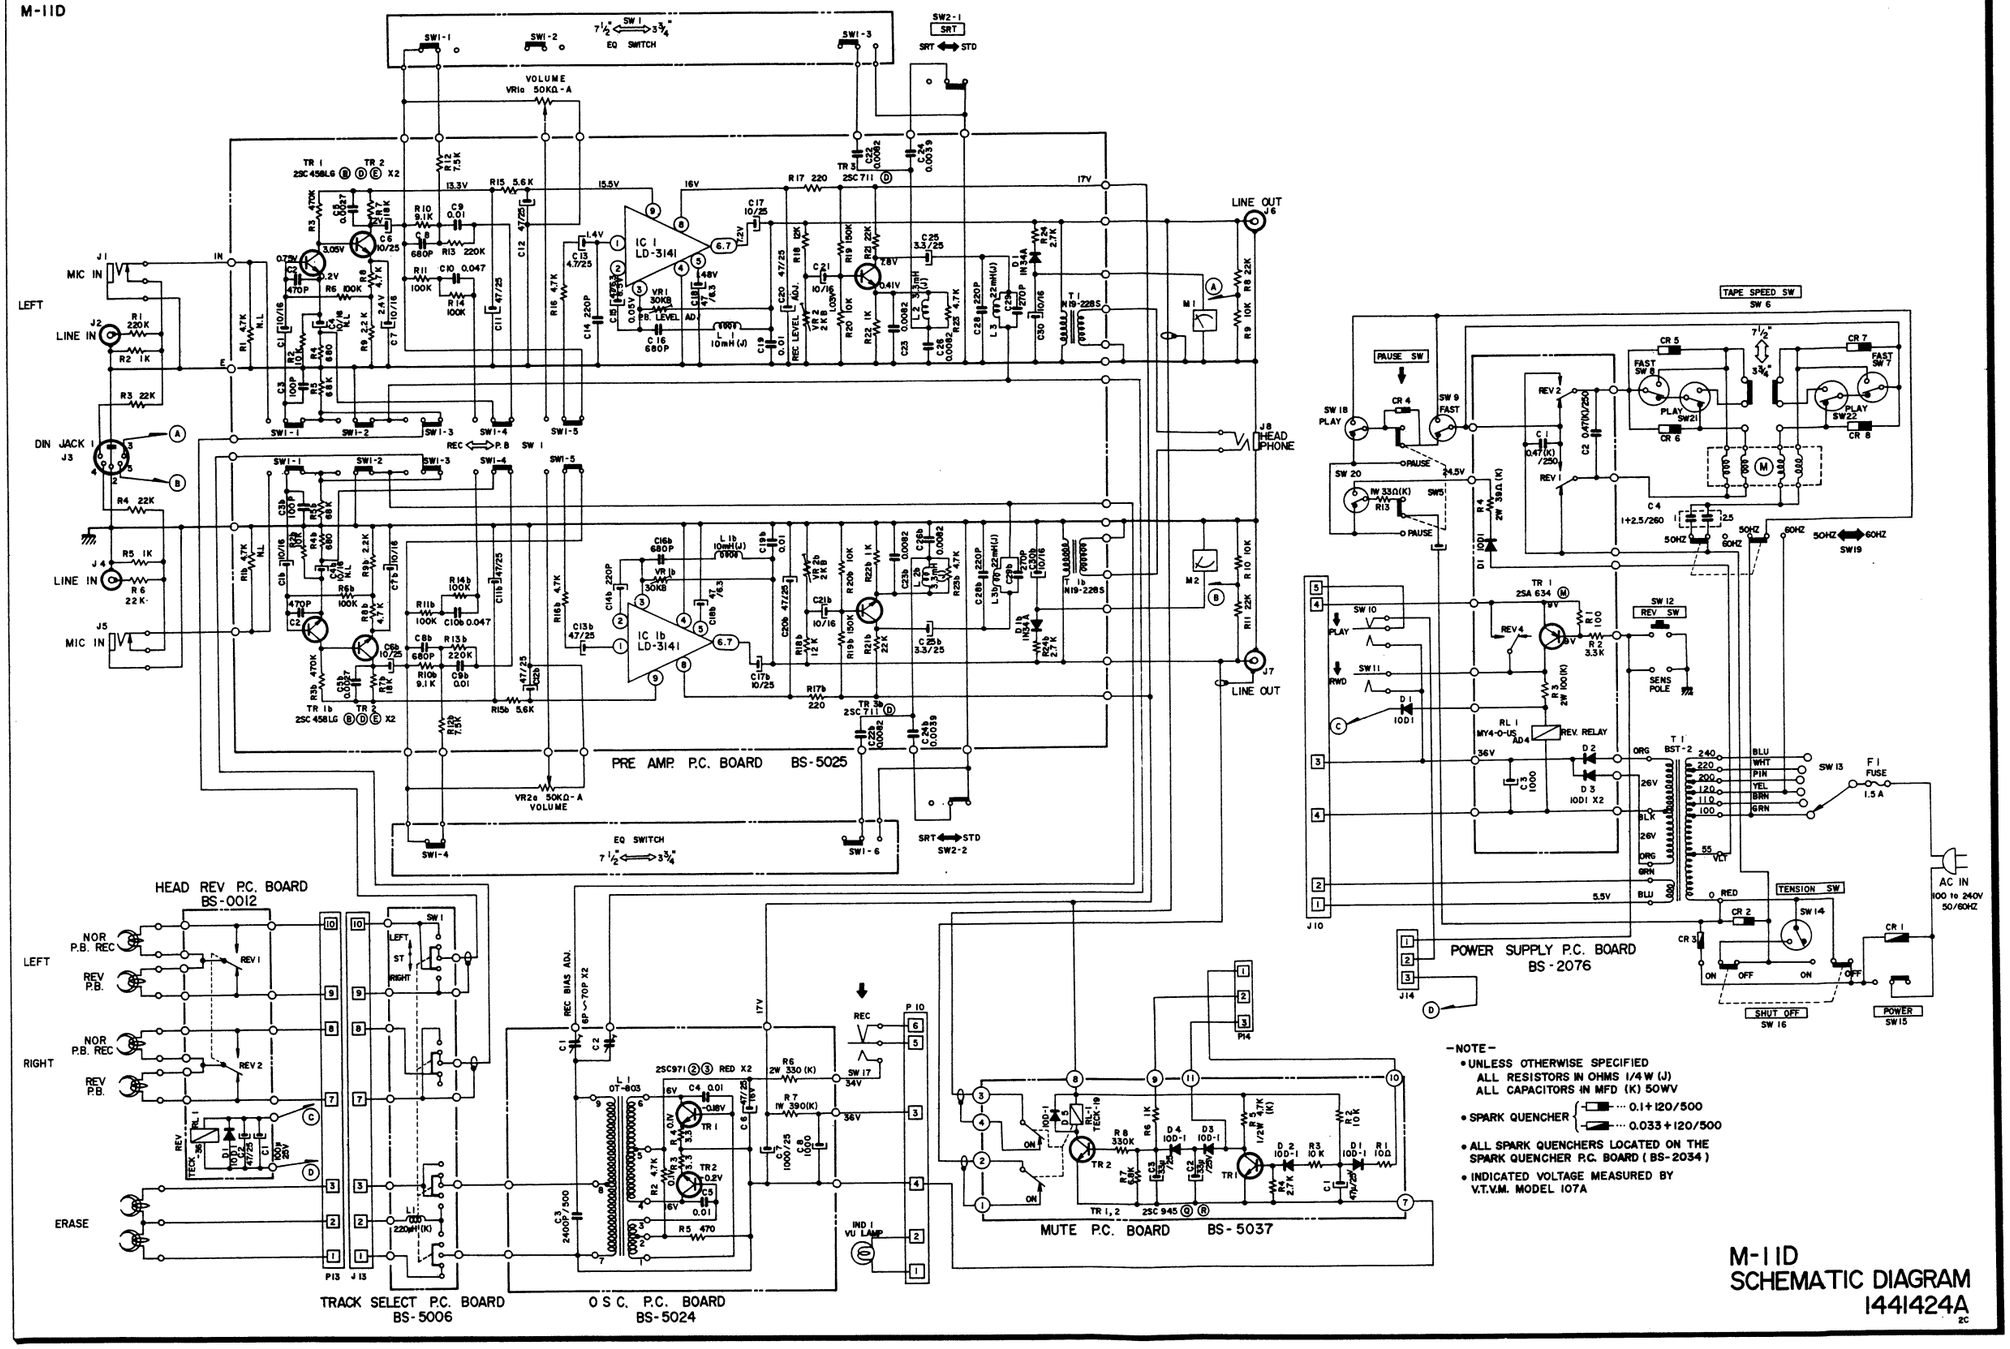

-NOTE-

- UNLESS OTHERWISE SPECIFIED
  ALL RESISTORS IN OHMS 1/4W (J)
  ALL CAPACITORS IN MFD (K) 50WV
- SPARK QUENCHER ····· 0.1+120/500 ····· 0.033+120/500
- ALL SPARK QUENCHERS LOCATED ON THE SPARK QUENCHER P.C. BOARD (BS-2034)
- INDICATED VOLTAGE MEASURED BY V.T.V.M. MODEL 107A

M-11D SCHEMATIC DIAGRAM

1441424A 2C

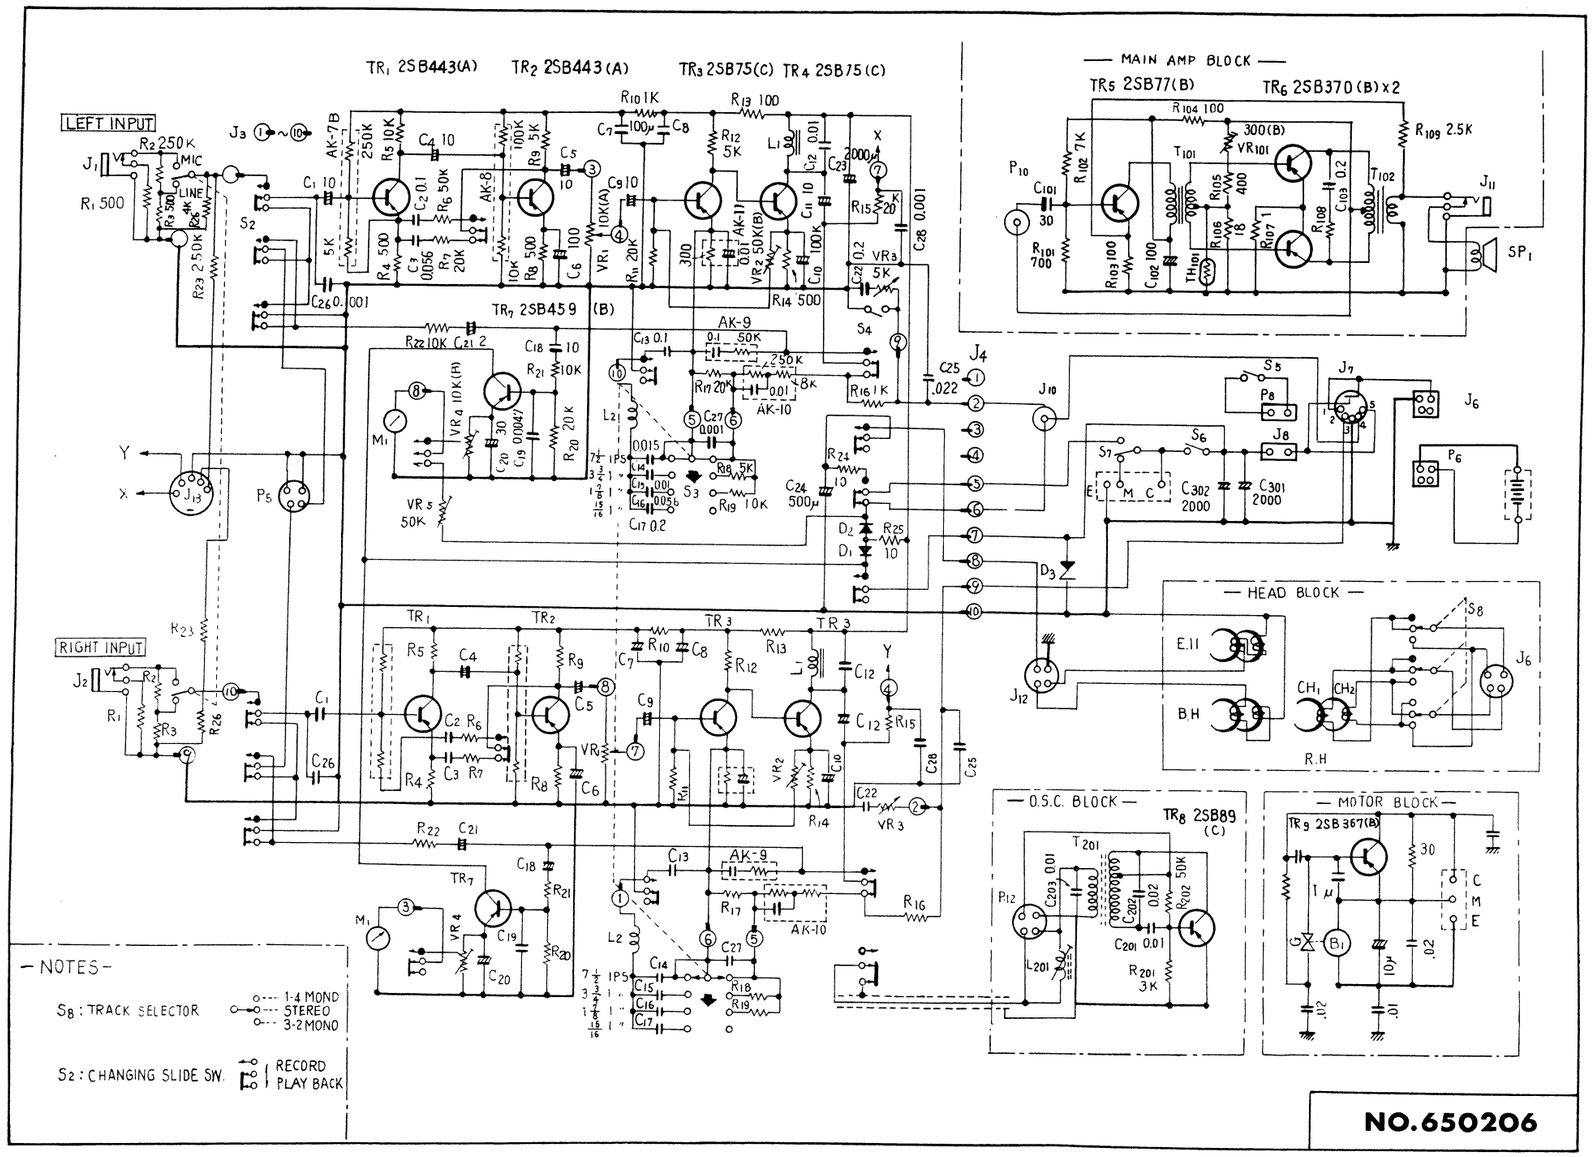

Record/Playback (gearing with Recording Button)

S_2 : Recording & Playback Changing Switch
S_3 : Equalization Selector (controled by speed selector Switch)
S_4 : Left Channel Speaker "ON" "OFF" Switch
S_5 : Power Switch (gearing with Volume Control)
S_6 : Power Switch (gearing with Start Button)
S_7 : Micro Switch (gearing with Start Button)

VR_1 : Volume Control
VR_3 : Tone Control

X-IV SCHEMATIC DIAGRAM

SW12 A.C. LINE VOLTAGE SELECTOR

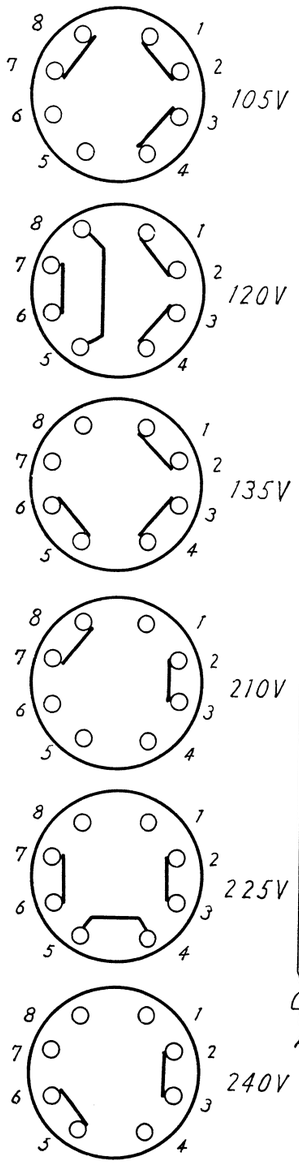

RIGHT MAIN AMP BLOCK

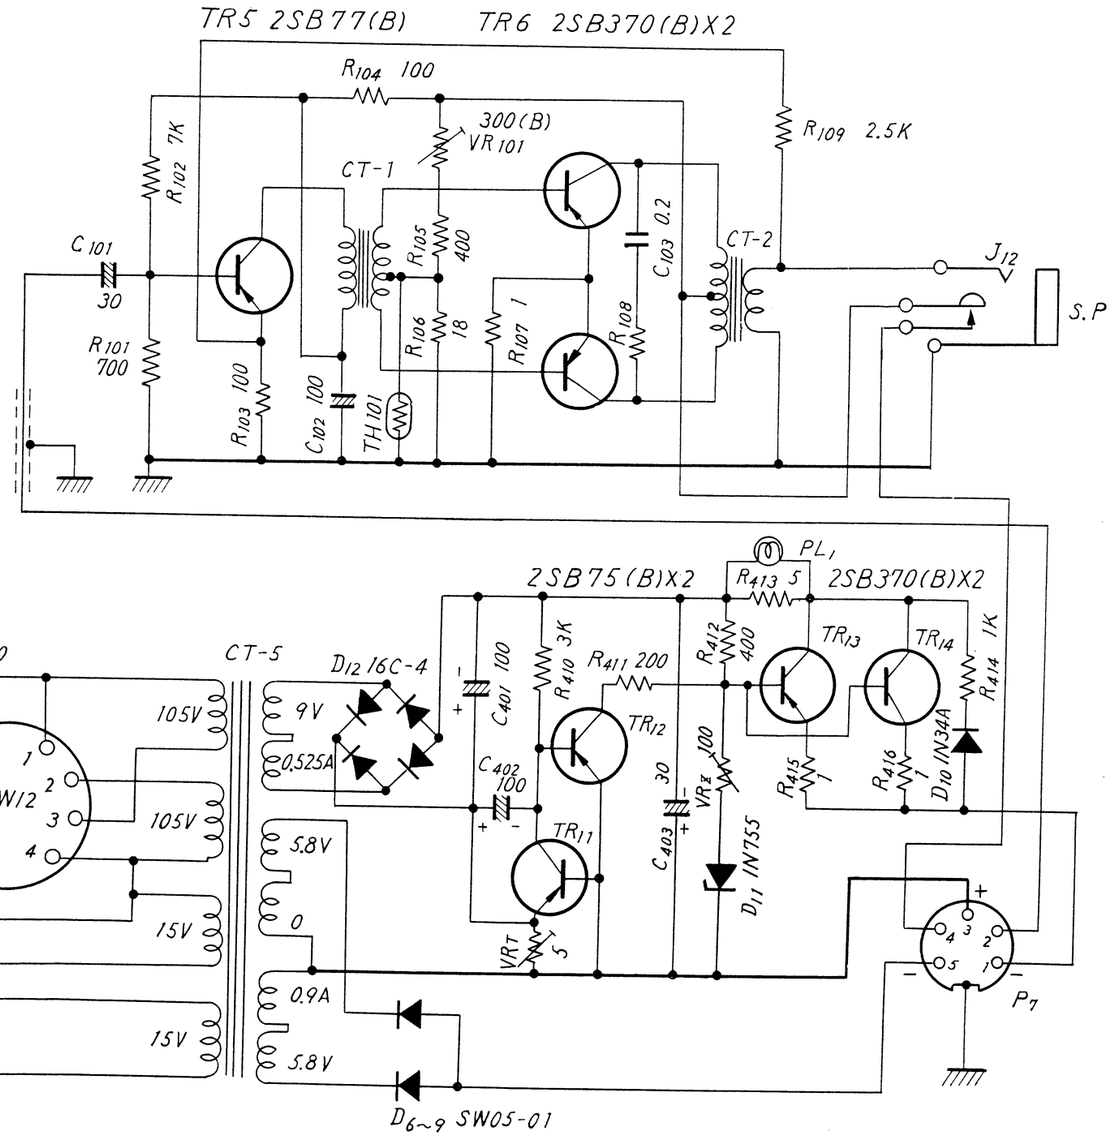

NO 651025

MODEL 1001 AC ADAPTOR (FOR MODEL X-IV RECORDER)